


REMINGTON®

MAINS / RECHARGEABLE
SHAVER



R605 & R655

£10,000 prize draw
PLUS Free Rewards Gallery
Register online now to
collect your reward
See back for
details

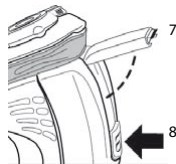

Thank you for choosing Remington®. Our products are designed to meet the highest standard of quality, functionality and design.

We hope you enjoy using your new Remington® product. Please read the instructions for use carefully and keep in a safe place for future reference.



CAUTION

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®
- Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.



KEY FEATURES

- 1 On/off switch
- 2 Head & Cutter assembly
- 3 Individual flexing heads
- 4 Head release button
- 5 Hairpocket
- 6 Power port
- 7 Pop-up trimmer
- 8 Trimmer button
- 9 Adaptor
- 10 Charging indicator light (R605)/ LED fuel gauge (R655)



GETTING STARTED

For best shaving performance, it is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.



CHARGING YOUR SHAVER

- Ensure that your hands, shaver and power cord are dry before charging your shaver.
- Turn the appliance off.
- Connect the shaver to the adaptor, then to the mains and charge for at least 24 hours when using for the first time.
- After the shaver is fully charged, the green indicator light will glow steadily (R605), or fuel gauge will indicate the shaver is fully charged (R655).
- Use product until the battery is low. This is indicated by illuminated red light.
- Fully recharge for 24 hours every 6 months to maintain battery condition.
- When empty, the battery will be fully charged within 24 hours.

◆ HOW TO USE

✦ SHAVING

- Make sure your shaver is properly charged or use directly from the mains.
- Switch the shaver on.
- Stretch the skin with your free hand so the hairs stand upright
- Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage).
- Use short, circular strokes.

✦ TRIMMING

- While your shaver is switched on, slide the on/off switch upwards to activate the trimmer.
Push the trimmer release button.
- Hold the trimmer at a right angle to your skin.
- To retract the trimmer push the top rear of the trimmer downward until it locks under the trimmer release button.

➔ Tips for best results

1. Ensure your skin is dry.
2. Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
3. Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
4. DO NOT press hard against the skin in order to avoid damage to the rotary heads.

👁 CARE FOR YOUR SHAVER

Care for your appliance to ensure a long lasting performance.

We recommend you clean your appliance after each use.

The easiest and the most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.

Keep the trimmer in the "off" position when the shaver is not in use.

👁 CLEANING

✦ DAILY

- Ensure the shaver is switched off and unplugged from the mains outlet.
- Open the shaver head by pressing the release button on the front of the shaver.
- Tap out excess hair shavings and use a cleaning brush if necessary.
- Close head assembly.

✦ MONTHLY

- Perform the daily cleaning steps first.
- Open the shaver head by pressing the release button on the front of the shaver and flipping open the head away from the body of the shaver.
- Release the inner cutter carrier by rotating the locking arms counter-clockwise.
- Pull the inner cutter carrier away from the inner cutters.
- Thoroughly brush hairs from the inner and outer cutters and rinse out remaining debris.
- Replace inner cutter.
- Place the inner cutter carrier back onto the upper hairpocket and lock in place by rotating the locking arms clockwise until the arms 'click' into place.

Rotary heads replacement model: SP-TF2

Replacement parts and accessories available to buy at <http://www.remington.co.uk/parts-accessories>

👁 TRIMMER

Lubricate the teeth of the trimmer every six months with one drop of sewing machine oil.

◆ IMPORTANT SAFETY INSTRUCTIONS

Warning – To reduce the risk of burns, electrocution, fire, or injury to persons:

- An appliance should never be left unattended when plugged in to a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Make sure the power plug and cord do not get wet.
- Do not plug or unplug the appliance with wet hands.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- Do not twist or kink the cable, and don't wrap it around the appliance.
- Store the product at a temperature between 15°C and 35°C.
- Only use the parts supplied with the appliance.
- The appliance, including its cord, must not be used, played with, cleaned or maintained by persons under eight years old and should at all times be kept out of their reach. Use, cleaning or maintenance of the appliance by children over eight or by anyone with a lack of knowledge, experience or with reduced physical, sensory or mental capabilities should only be undertaken after receiving appropriate instruction and under the adequate supervision of a responsible adult to ensure that they do so safely and that the hazards involved are understood and avoided.
- Don't put the appliance in liquid, don't use it near water in a bath-tub, basin or any other vessel, and don't use it outdoors.




➔ TROUBLESHOOTING

- If your shaver battery is completely empty or the shaver has not been used for an extended period of time, the shaver may not start when operated using the cord. If this occurs, charge the shaver for approximately 15 sec. before shaving.
- Your shaver should be mainly used in cordless mode and only recharged when battery charge is low. Extended mains only use or continuous connection to the mains will result in the reduction of the battery life.

⚡ WIRING INSTRUCTIONS UK PLUGS ONLY

The product doesn't need an earth.
It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the blue wire to N, and the brown wire to L.
Fit the cord grip.
If in doubt, call an electrician.
Don't use a non-rewireable/moulded plug unless the fuse cover is in place.
If you remove the plug, dispose of it.

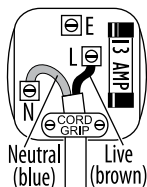

♻️ ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



🔋 BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure that the shaver is discharged of all power.
- Using a screwdriver remove the screw from the back of shaver.
- Open the pop-trimmer and remove the screw from the back of shaver.
- Using a flat-headed screwdriver gently lift or pry open the rear housing and open the shaver.
- Cut the metal tabs connecting the batteries and remove them from the printed circuit board.
- The battery is to be disposed of safely.

➔ SERVICE AND GUARANTEE

This product has been checked and is free of defects.

We guarantee this product against any defects that are due to faulty material or workmanship for the guarantee period from the original date of consumer purchase.

If the product should become defective within the guarantee period, we will repair any such defect or elect to replace the product or any part of it without charge, provided there is proof of purchase.

This does not mean an extension of the guarantee period.

In the case of a guarantee simply call the Service Centre in your region.

This guarantee is offered over and above your normal statutory rights.

The guarantee shall apply in all countries in which our product was sold via an authorised dealer.

This guarantee does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required.

This guarantee shall not apply if the product has been dismantled or repaired by a person not authorised by us.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it.



+44 0800 212 432 (free call)

Customer Services
Spectrum Brands(UK) Limited
Fir Street,
Failsworth,
Manchester
M35 0HS,
UK

12/UK/R605 & R655 Version 01/12 Part No. T22-33240
Remington® is a Registered Trade Mark of Spectrum Brands, Inc.,
or one of its subsidiaries
Spectrum Brands (UK) Ltd
Fir Street,
Failsworth,
Manchester
M35 0HS
www.remington.co.uk
© 2012 SBI



REGISTRATION AND PRIZE DRAW

Collect your free reward, and a chance to win £10,000.
Visit www.productregister.co.uk/remington