

# *BaByliss<sup>®</sup> FOR men*



i-stubble+

Model 7895U

# *BaByliss<sup>®</sup> <sub>for</sub> men*

## **i-stubble+**

Maintain your look, everyday with the next generation in stubble control technology.

The BaByliss For Men i-stubble has 15 ultra precise length settings, so you can maintain your preferred facial hair style at all times. Whether you're looking for a short shadow look, a longer stubble look, or even a short beard, the i-stubble is the ultimate in stubble control. The motorised length control gives precise adjustment from a 0.4mm shadow so you can get exactly the look you want. Its unique floating contouring head tracks the curves of your face for exceptional accuracy and comfort to give you an ultra precise stubble shave.

## **FEATURES**

- Unique floating contouring head tracks the curves of your face for exceptional accuracy and comfort.
- Motorised length control from a 0.4mm shadow with precise automatic adjustments with memory function.
- Advanced power performance with long-lasting dual battery system for reliable and fast stubble shaving.
- Advanced blade technology with electro-chemically sharpened blades for extreme sharpness and durability.
- LCD screen displays selected length and charge level.
- Protective comb guide delivers ultimate length consistency, removable for easy cleaning.
- Rapid charging system, 90 minute charge provides 45 minutes use or 5 minutes quick charge for a single stubble shave.
- Shaver-style power lead for convenient rechargeable or corded use in the bathroom. Also includes a standard 3-pin plug adaptor.
- Ergonomic design with curved body for easy control and complete comfort in use.

- 3 Year Guarantee.

## **SAFETY CAUTIONS**

**WARNING!** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

- This appliance should only be used as described within this instruction book. Please retain for reference.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to UK After Sales Service section for further information).
- Only use the attachments supplied with this appliance.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young

children.

- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- Allow the appliance to cool before storing away.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).
- The battery should be removed for safe disposal at the end of its life.
- When the battery has run down, it should be disposed of at a recycling centre to safeguard the environment. If the battery leaks, avoid touching it and dispose of it at a recycling centre.

## **INSTRUCTIONS FOR USE**

### **IMPORTANT : CHARGING**

#### **First time use**

- The i-stubble is so easy to use, but before you do anything you must take your time to charge the unit for 16 hours before its first use. Even if you want to use it plugged in to your shaver socket, this initial super-charge ensures optimum power performance to give smooth fast trimming every time.

After the first charge a full charge will only take 90 minutes. Maximum battery capacity will only be reached after 3 charging/discharging cycles.

- Connect the power adaptor to the socket on the underside of the i-stubble trimmer.
- Plug the power adaptor into a suitable bathroom shaver socket. If you don't have a bathroom shaver socket, you can use the 3-pin plug adaptor supplied with this product. Place the 2-pin adaptor into the back of the supplied 3-pin plug adaptor and plug into an electrical socket as normal.
- Always check that the charging indicator on the LCD comes on when you connect the power lead into the product.

### **Regular charging**

- A full charge will take 90 minutes and will supply enough power for minimum 45 minutes continuous cordless use. The remaining battery life is shown on the LCD display.
- In order to maintain the optimum capacity of the rechargeable batteries, the appliance should be recharged for 16 hours every 3 months approximately.
- The i-stubble comes with a quick charge feature. A 5 minute charge will provide enough power for approximately 3 minutes use.

### **Operation with power cord (not cordless)**

- Plug the power cord directly into the i-stubble.
- Plug the power adaptor into a suitable bathroom shaver socket supply, or use the 3-pin plug adaptor and plug into a electrical socket as normal.
- Always ensure the i-stubble is switched off and unplugged after use, unless you intend to keep the i-stubble on charge.

### **Switching On**

Press the 'Power on/off' button and release, the battery indicator on the LCD screen will cycle through a few times before the remaining battery life is displayed.

### **Switching Off**

To switch off the i-stubble hold down the 'Power on/off' button for 2 seconds then release.

## **Preparation for Use**

Always inspect the i-stubble before use to ensure the cutting head is free from hair and debris and is running smoothly.

## **Using the comb guide**

The comb guide allows you to change the cutting length of your trimmer. You'll need to experiment to find your preferred length, but as a guide, 0.4mm will give you very short stubble, whilst 1.6mm will give you a longer stubble look. 2mm+ will give you a short beard.

- Ensure the comb guide is correctly positioned by pushing the comb guide gently downwards to secure into place.
- Use the digital touch control “up” or “down” buttons to adjust the telescopic comb guide to the required length.
- The cutting lengths are displayed on the LCD screen in “mm” – scroll through the available length settings with the digital touch controls. There are 15 length settings available: 0.4mm, 0.6, 0.8, 1.0, 1.2, 1.4, 1.6, 1.8, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0mm.
- Select your required length – the length setting will then remain displayed on the LCD screen.
- Push the power button to switch the i-stubble on.

## **Memory Function**



This stubble trimmer has a memory function that stores the last chosen length setting. When the unit is switched off the comb guide returns to 0.4mm position. When the trimmer is switched back on the comb guide automatically moves up to the last chosen length setting.

## **Using the trimmer without the comb guide**

- Using without the comb guide is ideal for detailing/shaping and general tidying of edges.
- To detach the comb guide, gently hold the trimmer in one hand and with your thumb and index finger push up on each side of the comb guide (fig. 1). Flip the comb guide to the back of the unit and lock it into position by clicking it securely onto the fastener on the back of

the handle (fig. 2).

- Switch the i-stubble on by pushing the “power on” button. The LCD will illuminate and the blades will start to move.
- If you are looking for an ultra close finish, you can use the trimmer without the comb guide. This will give you an extremely short cut.

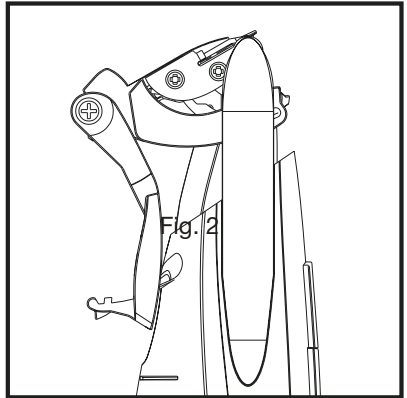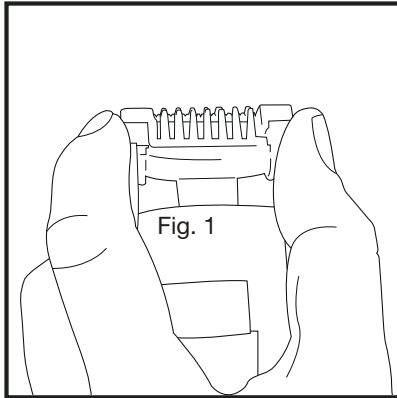

**IMPORTANT:** please note when using the trimmer without the comb guide, the cutting length will be below 0.4mm. The length setting shown on the LCD screen will no longer be relevant when the comb guide is detached.

### **i-Stubble Top Tips**

- Use on clean, dry hair.
- If possible, when using for the first time, try and grow your facial hair for a few days before cutting so you can trim down to a level that is best for you.
- Set the cutting length as required.
- It is always best to start cutting with a longer length first, then trim again if the length is longer than desired.

- Hold the i-stubble against the hair, the teeth of the comb guide should be pointing upwards and should be flat against the face.
- Move the trimmer upwards through the hair, a little at a time, against the direction of hair growth. The floating and contouring head will follow the curves of your face to ensure both accuracy and comfort.
- The i-stubble will work most effectively when cutting through the hair at its own speed – never force through the hair. You may experience a little resistance when trimming the neck area, where hair is thicker and grows in many different directions. This is completely normal.
- Just like shaving, extra time should be given when trimming under the neck area, as again this is where hairs grow in many different directions.
- Never switch the trimmer off whilst in the hair.

## **CLEANING & MAINTENANCE**

- Regular cleaning will maintain the high performance of your i-stubble.
- Switch off and remove the power cord if connected.
- Detach the comb guide by gently lifting the front of the comb guide from both sides and flipping it over to the back of the unit and locking it into position by clicking it securely onto the fastener on the back of the handle.
- Use the cleaning brush supplied to brush away any hair and debris. Do not use a sharp object to clean the trimmer blade.
- The blades can be removed to aid cleaning.
- To remove the blades hold the handle of the i-stubble with one hand, place your thumb underneath the blades and push the blades away from the handle.
- Gently blow away any hair trapped beneath the blades.
- The blades can be rinsed under the tap. After rinsing the blades they may need to be oiled. See oiling instructions below.
- Ensure the blades are dry before re-attaching to the trimmer body.
- Ensure you clean the blades after each use and before storing away.



- It is highly recommended to oil the blades from time to time with the oil provided. This ensures optimum cutting performance. For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil. To oil the blades ensure the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil onto the blades. Leave the unit on for a further few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.



## **BATTERY DISPOSAL** ████████

This appliance contains Nickel Metal Hydride batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about the recycling of electrical and battery operated appliances please contact your local council office or your household waste disposal service. For specific enquiries regarding the replacement of batteries in this product please contact our Conair Customer Care Line – see “UK After Sales Service” section.

## **UK GUARANTEE**

This BaByliss appliance is guaranteed for consumer use for 3 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

## **UK AFTER SALES SERVICE**

For further advice on using the appliance, contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre,  
Conair Logistics  
Unit 4  
Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.



