

Service
Service
Service



Philips Domestic Appliances and Personal Care

Service Manual

PRODUCT INFORMATION

General:

- Rechargeable
- World wide automatic voltage selection
- Washable
- Charge indication
- Battery low indication
- Battery full indication
- Travel lock
- Cleaning indicator
- Charge indicator
- Shaving unit replacement indicator

Safety info


- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Voltage : 100 - 240 V / 50 - 60 Hz
- Shaving unit : RQ10 (4222 036 15000)
- Charging time : 1 hour
- Shaving time : up to 21 day's
- SAP coding : RQ1051

DISASSEMBLY- AND RE-ASSEMBLY ADVICE


- Remove shaving unit to prevent damaging during repairing
- Remove pivot cap (pos 3) with a little knife
- Remove screws **A**

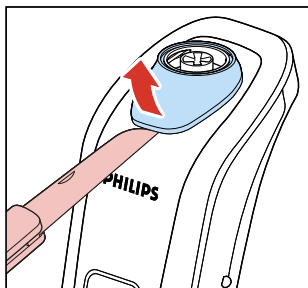


- Remove cover (pos 12)

Start on trimmerside

push left on the housing and right on the cover and make a small opening

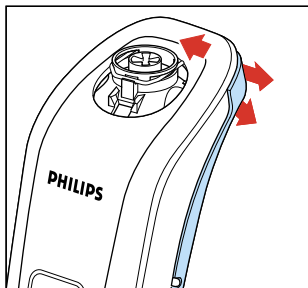

now push right on the housing and left on the cover so you can remove the cover.

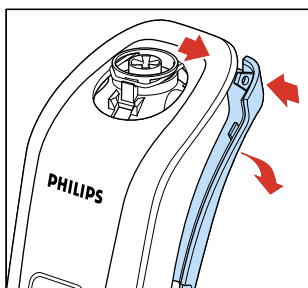


- Remove side grip's
- Remove housing shell (pos 4) start on trimmer side
- Remove deco plate assy (pos 7) snaplock on the side
- Remove screws **B**
- Remove pivot base (pos 8)
- Remove trimmer

REPAIR INSTRUCTIONS

- No specific issues


OPTIONAL (accessories)

- 4222 036 02770 Brush black
- 4222 036 04080 Power plug U1 Str. EUR.
- 4222 036 05160 Power plug U1 Str. NOR
- 4222 036 05120 Power plug U1 Str. AUS/NZ
- 4222 036 04090 Power plug U1 Str. GBR
- 4222 036 05110 Power plug U1 Str. CAN/TW
- 4222 036 03810 Power plug U1 Str. MEX
- 4222 036 04850 Power plug U1 Str. KOR
- 4222 036 03870 Power plug U1 Str. JAP
- 4222 036 10320 Power plug U1 Str. PRC
- 4222 036 03760 Power plug U1 Str. ARG
- 4222 036 15020 Stand HE

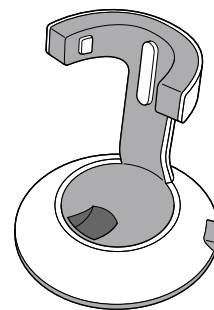

PARTS LIST

Pos	Service code	Description
1	4222 036 14990	Protection cap
2	4222 036 15000	Shaving unit SR1
3	4222 036 15080	Pivot cap SR1
4	4222 036 15100	Housing shell SR1 LE
5	4222 036 15050	Basic body SR1 LE
6	4222 036 14950	Magnet SR1
7	4222 036 15160	Deco Plate assy SR1 LE
8	4222 036 14980	Pivot base SR1
9	4222 036 15010	Trimmer assy SR1 HE/LE (Black knob)
10	4222 036 14940	Pivot Release spring SR1
11	4222 036 14970	Sidepanel (L+R) SR1 ME/LE
12	4222 036 15060	Cover shell SR1 HE/LE
	4222 036 03540	Screw A (Black)
	4822 502 14545	Screw B

 = changed

