



# Philips SensoTouch - Soft touch, smooth shave

The new Philips SensoTouch RQ1195 electric shaver provides a soft touch for a smooth shave. The GyroFlex 2D system easily adjusts to the curves of your face and shaves even the shortest stubble with its DualPrecision heads.

## **A shaver that adjusts to the curves of your face**

- GyroFlex 2D system adjusts easily to the curve

## **Close and comfortable shave**

- DualPrecision shaves even the shortest stubble
- SensoTouch Shavers with Super Lift&Cut Action

## **An electric shaver that takes care of your skin**

- Aquatec seal for comfortable dry shaves and refreshing wet shaves
- Smooth, low-friction SkinGlide to minimise irritation

## **Shave with perfect control and precision**

- NEW: click-on Beard Styler with 5 length settings

Philips SensoTouch  
wet and dry electric shaver  
with Aquatec

- DualPrecision heads
- Beard Styler
- 50 min

SensoTouch



RQ1195



**PHILIPS**

# Highlights

## DualPrecision




DualPrecision shaving heads have slots to shave the normal hairs and holes to shave even the shortest stubble.

## Super Lift & Cut Action



The dual-blade system built into the Philips electric shaver lifts hairs to cut comfortably below skin level for a closer shave.

## Aquatec

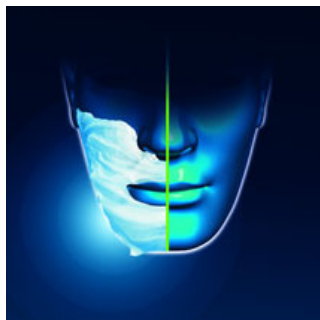

The Aquatec wet and dry seal of the electric shaver lets you choose how you prefer to shave. You can get a comfortable dry shave or a refreshing wet shave using a shaving gel or foam for extra skin comfort.

## SkinGlide



The low-friction SkinGlide shaving surface of the electric shaver slides smoothly along your skin for a close, easy shave.

## GyroFlex 2D




The GyroFlex 2D contour-following system of the shaver adjusts easily to the curves of your face, minimising pressure and irritation for a close shave.

## NEW: Beard Styler attachment



Skin friendly click-on Beard Styler to experience more facial styles: for anything from a 0.5 mm 3-day beard to a 5 mm short beard; Rounded tips and adjustable comb to prevent skin irritation.



# Specifications

## Shaving Performance

- Contour-following: GyroFlex 2D contour following
- Shaving System: DualPrecision System, Patented Super Lift & Cut
- Skin Comfort: SkinGlide

## Ease of use

- Charging: 1 hour, Rechargeable, Cordless, Quick charge
- Shaving time: Up to 17 days
- Display: Five level battery indicator, Battery low indicator, Charge indicator, Travel lock
- Wet and Dry: Wet and dry use
- Cleaning: Washable

## Design

- Handle: Slim handle, Anti-slip grip

- Finishing: Seamless foil, LED Display
- Colour: Black

## Accessories

- Stand: Foldable charging stand
- Pouch: Soft pouch
- Maintenance: Cleaning brush, Protection cap
- Click-on styler

## Power

- Battery Type: Li-Ion
- Run time: 50 min
- Stand-by power: 0.15 W
- Max power consumption: 5.4 W

## Service

- 2-year guarantee
- Replacement head: Replace every 2 yrs with RQ11



Issue date 2013-09-04

Version: 1.0.1

EAN: 08 71010 36389 95

© 2013 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)