



Philips AquaTouch
wet and dry electric shaver
with Aquatec wet and dry
and Pop-up trimmer

TripleTrack blades
Pivoting and Flexing Heads

AquaTouch



AT941

Use wet, protects skin

Now enjoy a refreshing shave without worrying about damaging your skin. The Aquatec seal ensures a comfortable dry shave and a refreshing wet shave. Use it wet with shaving gel or foam for enhanced skin comfort.

Also use wet for enhanced skin comfort

- Aquatec: refreshing wet shave with foam or an easy dry shave

Shave smooth

- TripleTrack blades cover 50% more skin surface at a time
- Super Lift&Cut blades raise hairs to cut closer
- Heads pivot and flex to follow every curve for comfort

Ease of use

- 60 shaving minutes, 1-hour charge
- Washable shaver with QuickRinse system
- Perfect for trimming your sideburns and moustache
- Three minute quick charge for one shave

Protect your skin

- Glides smoothly over the curves of your face



asimpleswitch.com

PHILIPS


Highlights

Aquatec wet and dry



The Aquatec seal on the shaver makes it 100% waterproof. Use it in the shower with your favourite shaving gel or foam for extra skin protection. Naturally, you can also shave dry for convenience. When you have finished, simply pop the heads open and rinse under the tap to easily clean your shaver.

60+ Shaving Minutes

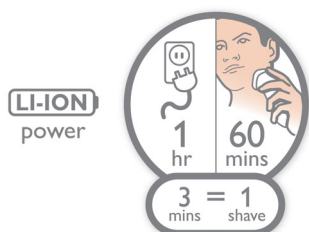

An energy-efficient, powerful lithium-ion battery gives you more shaves per charge. Charge it for an hour and you'll have up to 60 minutes of shaving time - that's around 20 shaves. The shaver automatically adjusts its power to suit the way you shave, so your actual shaving time may vary. Charge it for 3 minutes and you'll have enough power for one shave.

Fully waterproof

With QuickRinse system to clean under the tap and can be used under the shower

Skin protection system



Rounded low-friction protection heads adjust to the curves of your face to limit skin damage.

Super Lift&Cut Action



The first blade raises each hair while the second blade comfortably cuts below skin level, for really smooth results.

Pop-up trimmer

Complete your look by using the pop-up trimmer. Perfect for maintaining a moustache and trimming sideburns.

Quick charge for 1 shave

3-minute quick charge provides enough power for one shave, so that you are always fast even when the battery is empty

SmartPivot



Flexing heads stay in close contact with your skin, while the pivoting adds an extra dimension of movement - all giving you a close, fast and comfortable shave.

TripleTrack blades

TripleTrack blades with 3 shaving tracks cover 50% more skin surface at a time, while comfortably shaving both long hairs and stubble.

Specifications

Accessories

- Maintenance: Cleaning brush, Protection cap

Design

- Handle: Easy grip
- Finishing: NA
- Colour: NA

Ease of use

- Wet and Dry
- Cleaning: Fully waterproof, QuickRinse hair chamber
- Display: 1 LED indication, Battery full indication, Battery low indication, Charging indication, Quick charge indication
- Operation: Rechargeable battery, Cordless use
- Display indicates: Battery low, Charging, Battery full, Replace shaving heads
- Shaving time: 60+ minutes, up to 21 shaves
- Charging time: 1 hour, 3 min quick charge for 1 shave

Power

- Automatic voltage: 100-240 V
- Battery Type: Li-Ion
- Maximum power consumption: 5.4 W
- Stand-by power: < 0.25 W

Service

- Replacement heads: Replace every 2 yrs with HQ9

Shaving Performance

- Shaving System: Super Lift&Cut, TripleTrack blades
- Contour-following: Pivoting and Flexing heads
- Styling: Integrated pop-up trimmer

